treesse

minipool Shadow


Pre-installation manual EN

Proper preparation of the premises and systems will ensure a safe and rapid installation of the minipool. For this reason we advise you to read this manual carefully and to carefully follow all the information contained herein.

The Treesse team is always available for any information or request for assistance that may be required during preparation.

GRUPPO TRE S s.p.a.
Telephone +39 0761 527242
Fax +39 0761 527223
Email info@gruppotres.it

Good luck with your work!

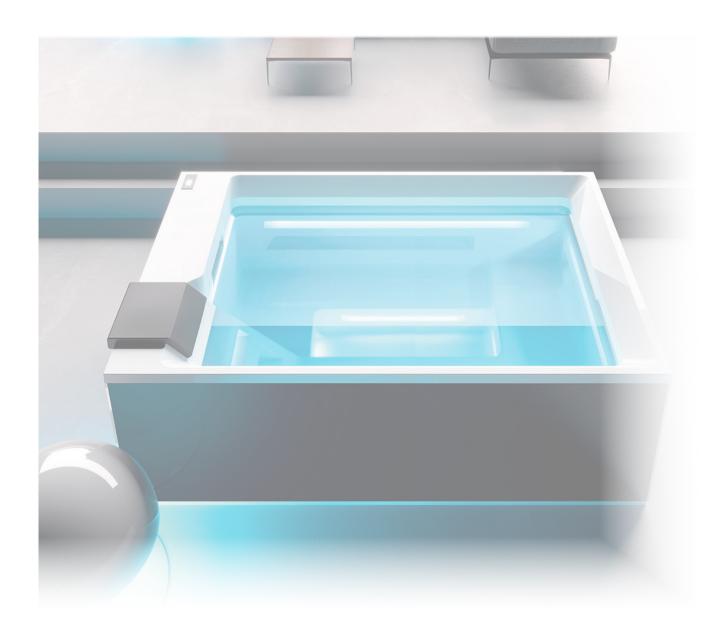

Contents

MEASUREMENTS AND TECHNICAL SPECIFICATIONS	4
TEMPORARY POSITIONING	5
WHAT PREPARATIONS ARE REQUIRED?	6
3 IDENTIFICATION OF THE INSTALLATION SITE	9
OUTDOOR INSTALLATION	9
INDOOR INSTALLATION	9
FREESTANDING INSTALLATIONS	10
PREPARATION OF THE INSTALLATION SITE	10
5 ELECTRICAL PREPARATIONS	12
6 CHARACTERISTICS OF THE WATER SUPPLY	15
TAP WATER AND WELL WATER	15
WATER HARDNESS	15
WATER ALKALINITY	15
CHARACTERISTICS OF THE WATER SUPPLY	16

201 x **162** x **83** cm

(79.13 x 63.78 x 32.68 inch.)



SHADOW MEASUREMENTS AND TECHNICAL SPECIFICATIONS











Packaging


Freestanding

Recessed

Drain

Pipe insulation


The manufacturer suggests a minimum load of 400 kg/m².

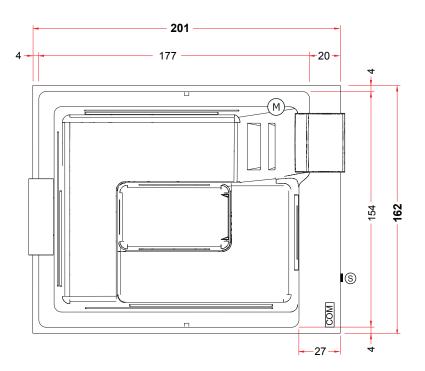

1000 litres (264 gal)	maximum water content
1220 kg (2690 lb)	weight with water
220 kg (485 lb)	weight when empty
230 380	Volt
22 (220V) 3x16 (380V)	Amperes
2.5 Hp	whirlpool motor
0.38/1.8 kW 1x2 speed	absorbed power
3 kW	temperature control
paper	filtering system

-5°C min

+45°C max

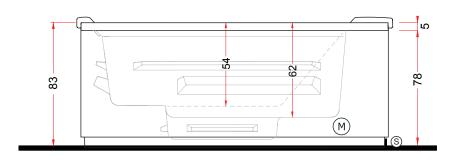

S drain

whirlpool motor

operating

temperature

The minipool works efficiently and safely if it is installed correctly and in compliance with the regulations in force in the country of use.

This pre-installation guide provides information for a proper preparation of the environments and the plumbing and electrical connections.

This allows for a quick and safe installation.

The pre-installation stages involve the following professionals:

- A construction engineer for the calculation of the loading capacity of the platforms or floors.
- A qualified and certified company that will prepare the installation site according to the instructions provided in this guide, following current work safety regulations.
- Certified and qualified electrician who prepares electrical systems in compliance with local and national regulations regarding civil and industrial systems.

The user must promptly notify the professionals of any existing underground obstacles like gas or water lines and electrical or telephone cables.

Upon completion of pre-installation all these specialists must issue a declaration of conformity of the systems installed. Without such document, the Manufacturer declines any responsibility for damage to the systems or premises where the minipool will be installed.



We recommend checking with the appropriate municipal offices to see if there are constraints that prevent installation or if permits are required. An incorrect pre-installation could cause structural damage to the minipool and void the warranty.


TEMPORARY POSITIONING

The installation of the minipool should be done immediately upon receipt.

In any case, once unpacked, if it is necessary to temporarily place it on a surface awaiting the installation, it will be necessary to place level concrete slabs having a minimum thickness of 5 cm under the entire bottom of the minipool.

Since the temporary base may shift, it is recommended to leave the minipool in that position for the shortest possible time.

Do not leave the empty minipool in DIRECT SUNLIGHT. The surface temperature could rise above 80°C resulting in serious damage, including cavitation and the deformation of the surface and components. Damage caused by direct exposure to sunlight is not covered by the warranty. In such conditions place a cover (fixed or mobile) to protect the minipool.

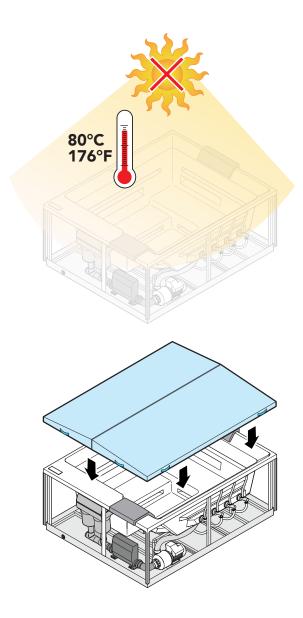



Please note

The Manufacturer cannot be held responsible and does not recognise the warranty in the case of:

- Installations or connections that are not compliant or that are carried out without following the national regulations concerning civil and industrial installations.
- Pre-installation and installation carried out by unqualified personnel or otherwise not in compliance with the instructions in the pre-installation and installation manuals.
- Incorrect preparation of the installation environments, including the supporting surface.
- accidents and damage due to a non-compliant installation or use of the bathtub;
- **Masonry works** that prevent the removal and handling of the minipool or defective parts thereof.




WHAT PREPARATIONS ARE REQUIRED?


To be installed, the minipool requires:

- 1 Identification of the installation site see page 9;
- 2 Preparation of the installation site see page 10;
- 3 prepare the drain following the stated measurements see page 7;
- 4 prepare the electrical system. see page 12.

The following pages will provide detailed explanations of how to perform these preparations.


EXAMPLES SHOWING
THE INSTALLATION OF
AN OUTDOOR/INDOOR MINIPOOL

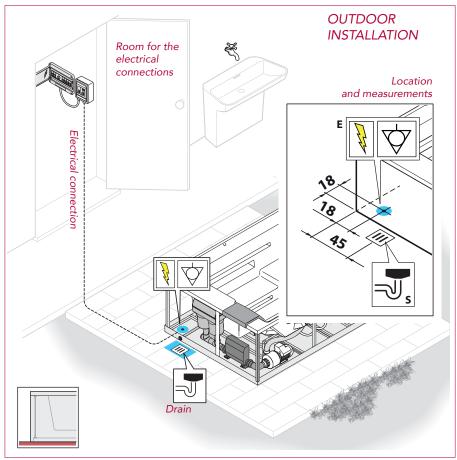

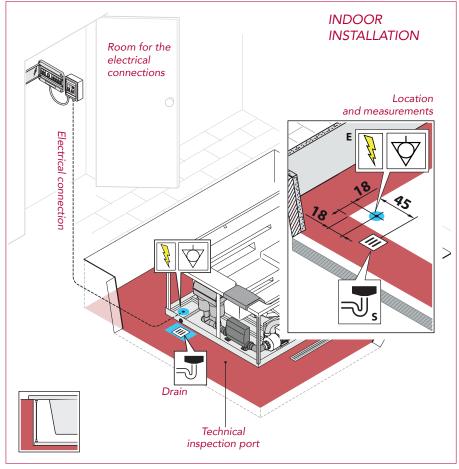



EN

PREPARATION OF CONNECTION TO AN OPTIONAL EXTERNAL EXCHANGER (NOT SUPPLIED)

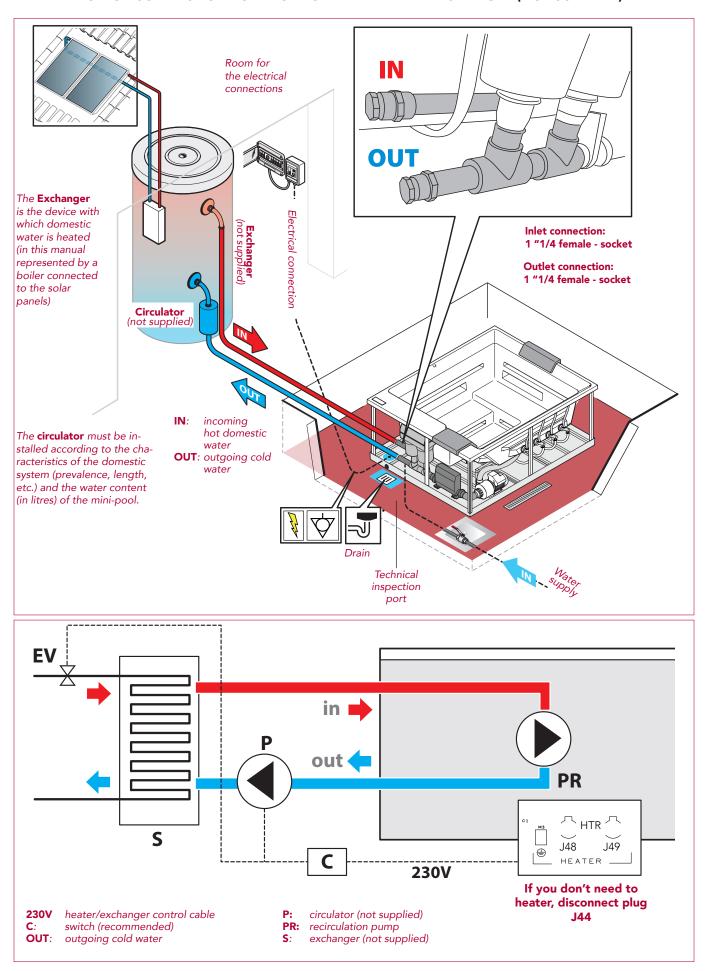

PREPARATION OF CONNECTION TO AN "SPA PACK" EXTERNAL (OPTIONAL)

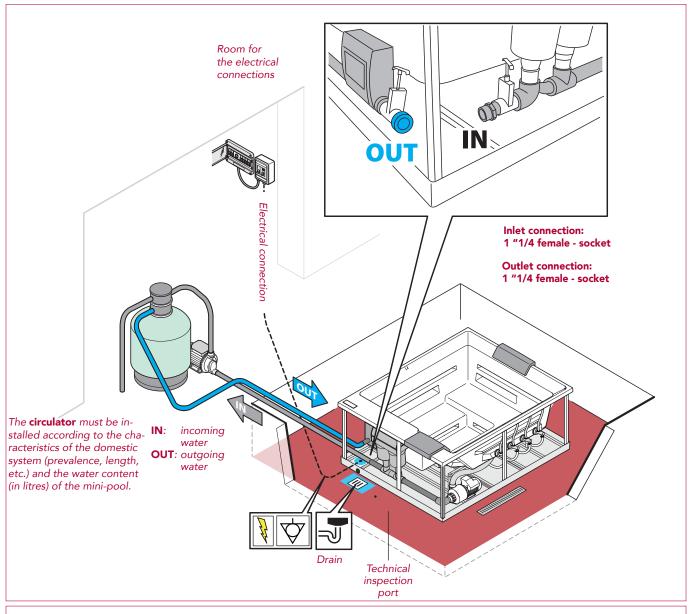

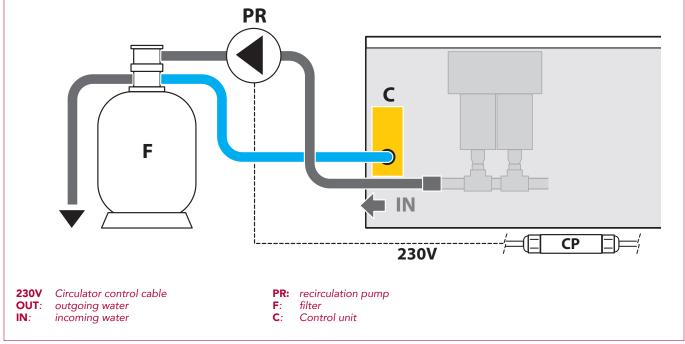



IDENTIFICATION OF THE INSTALLATION SITE



When choosing the position, take into account the local regulations that prohibit any electrical installation (plug sockets, switches, lamps, etc.) in the area surrounding the minipool for a distance of at least 60 cm and a height of 230 cm.



When choosing the position, bear in mind that the inspection side (electrical/plumbing components side) must always remain accessible for

future maintenance.

The recommended ambient temperature for the minipool must be between -5°C and 45°C, with a relative humidity of 20-80%.



Take into account the proximity of trees or hedges, and note that debris (e.g., leaves) can cause damage to the equipment over time that is not covered by warranty and make maintenance more expensive and frequent.

Also assess the best position to safeguard privacy and respect for others, as well as the best view or climatic position consistent with local regulations.

A sunny area with increased exposure during the morning ensures greater well-being for users!



Consider the geological composition of the soil on which the supporting platform will be built. Soils that are very sandy, permeable or subject to

flooding could compromise the durability of the minipool's support platform.


INDOOR INSTALLATION


Note that the evaporation of water in the minipool in the presence of high internal temperatures can generate very high levels of humidity in the environment.

To overcome this drawback, choose an environment with good natural or forced ventilation. As an alternative, install a dehumidification system. Humidity damage is not covered by the manufacturer warranty.



Take into account the size of the minipool: narrow passages, doors and steps can be an obstacle to its transport to the desired place.

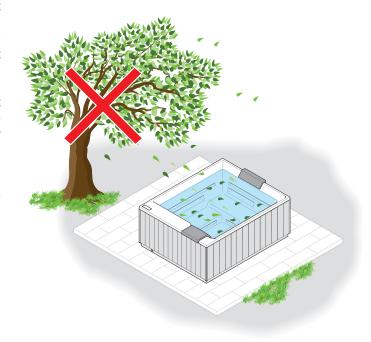

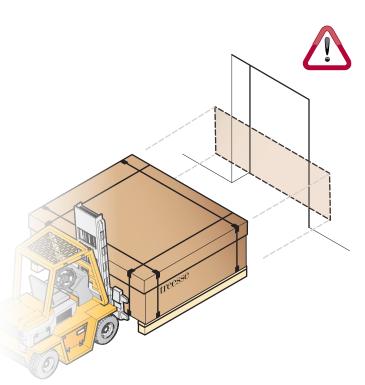

Treesse minipools are built to be positioned outdoors.

If you install the minipool inside, remember that it must be able to be easily inspected or moved for any ordinary and extraordinary maintenance operations.



PREPARATION OF THE INSTALLATION SITE



Before preparing the supporting surface, **see the sections on the electrical connections** for positioning the connections correctly.

FREESTANDING INSTALLATIONS

As a base, build a platform or flooring in reinforced concrete, at least 10 cm thick, <u>perfectly flat</u> and <u>suitable for supporting the weight of the minipool</u> and the people using it.

The manufacturer suggests a minimum load of 400 kg/m². In any case contact a qualified construction engineer to calculate the appropriate load for the installation site.

Wedges or shims cannot be placed under the minipool to level it.

Remember to ground the structural reinforcement in accordance with electrical codes.




Prepare:

- A) drainage grating around the perimeter to help preserve the equipment and the structure (even for indoor installations).
- (**B**) A non-slip flooring around the minipool.



For the preparation of the electrical connections see the pertinent section on page 12.

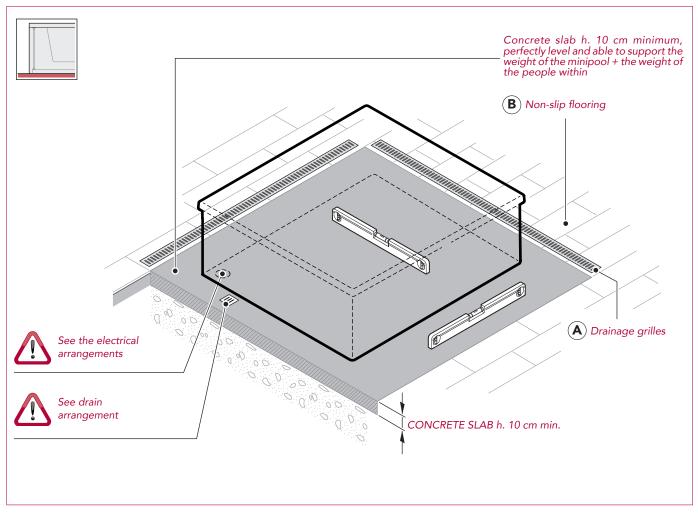

Pre-Installation

ΕN

Shadow minipool

BUILT-IN INSTALLATIONS

As a base, create an underground niche in reinforced concrete, with a minimum thickness of 10 cm, perfectly flat and suitable to support the weight of the minipool and its guests. The company recommends a minimum load of 400 kg/m². In any case contact a qualified construction engineer to calculate the appropriate load for your installation site.

Wedges or shims cannot be placed under the minipool to level it.

Remember to ground the structural reinforcement in accordance with electrical codes.

Prepare:

- (A) A technical inspection port* at least 50 cm wide on all sides of the minipool. This will make future maintenance or repairs easier.
- **(B)** drainage grating around the perimeter and in the recess to help preserve the equipment and the structure (even for indoor installations).
- (C) A non-slip flooring around the minipool.
- **D** Two Ø15 cm vents to ensure proper ventilation and extraction of the heat and moisture from the technical compartment.

FOR THE RECESSED OUTDOOR INSTALLATIONS, to avoid damage due to freezing we recommend insulating (E) the minipool recess. This procedure prevents excessive condensation that over time cause odours and damage to all major internal components. The choice of

materials and thickness should be based on the minimum temperatures reached in the country of installation.




For the preparation of the electrical connections see the pertinent chapter on page 12.

* If it was not possible to provide a technical inspection port on all sides of the minipool, a pneumatic lift is available (optional - to be requested from the Manufacturer) in order to simplify future maintenance operations. It is recommended to provide a removable inspection hatch "A" positioned on the side where the minipool components are situated. Regarding

the installation and use of the lifter, refer to its technical sheet and manual.

After positioning the minipool in its prepared space and after having connected the lift, test it.

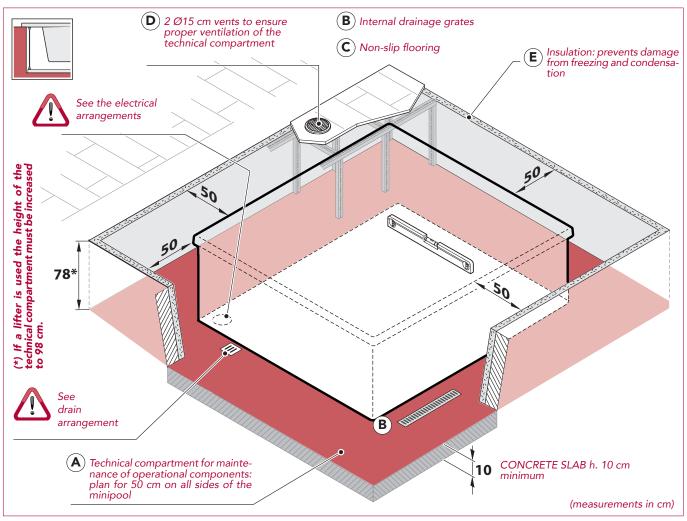



ELECTRICAL PREPARATIONS

The Treesse minipools are built in compliance with European laws (EN 60 335-2-60) and are tested during production to ensure the safety of the installer and user. The electrical preparations are to be performed by a suitably qualified and certified electrician.



All electrical preparations must be performed only after disconnecting the electricity in the work area

The electrical connection must be:

- Performed in a fixed and permanent manner, without intermediate splices, in accordance with regulations of the country of installation.
- Sufficient for the current absorbed by the bathtub (see technical specifications).
- Provided with a functioning ground as per current regulations.
- Protected against splashing water, then placed in a dedicated room, closed and sheltered from the weather.

- Controlled by a multi-pole switch with a contact gap of at least 3 mm and a breaking capacity equal to 60A (or in any case adequate for the absorption of the bathtub).
- Controlled by a differential switch no larger than 30mA.

The control unit's power supply cable must be of the H05 type with three wires (single-phase 230V) or five wires (three-phase - 380V) whose gauges are adequate for the absorption of the minipool (see "Pre-installation sheet"). Its size depends on the absorbed current and the distance of the minipool from the main electrical cabinet. In addition, if the minipool is installed outdoors, the power cord from the main electrical panel to the minipool must pass through an underground duct, adequately protected against freezing with insulation.





The Manufacturer is not responsible for connections made in a way that does not comply with local codes, the specifications in this pre-installa-


tion sheet or tampering with any electrical component of the minipool.




Local regulations prohibit any electrical installation (plug sockets, switches, lamps, etc.) in the area surrounding the minipool for a distance of at least 60 cm and a height of 230 cm.

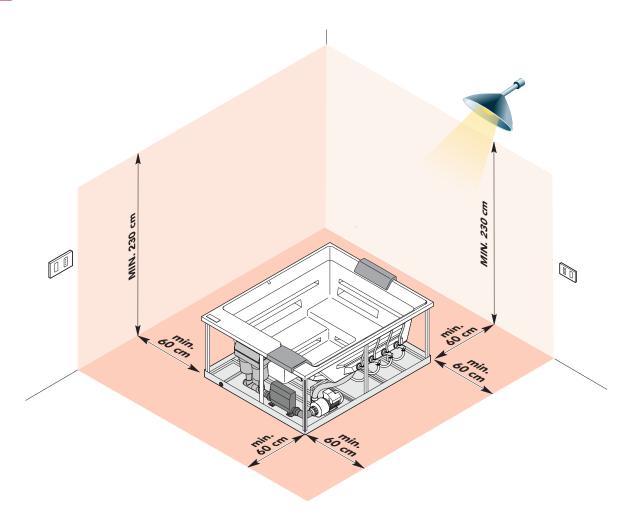

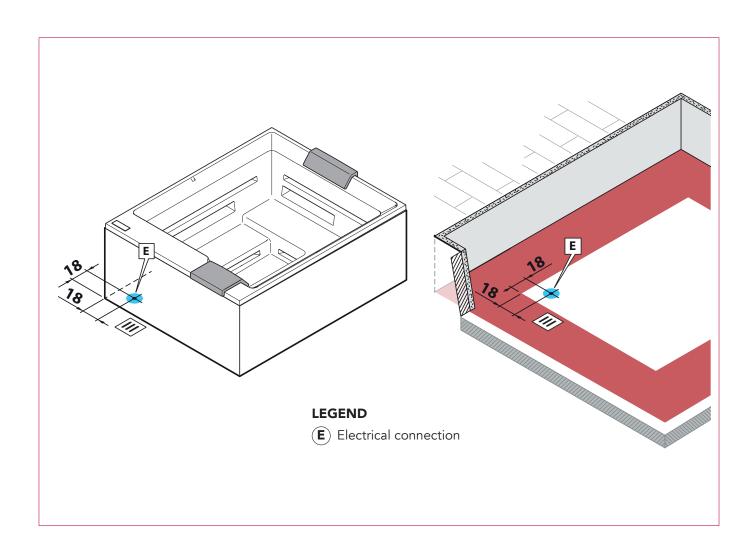

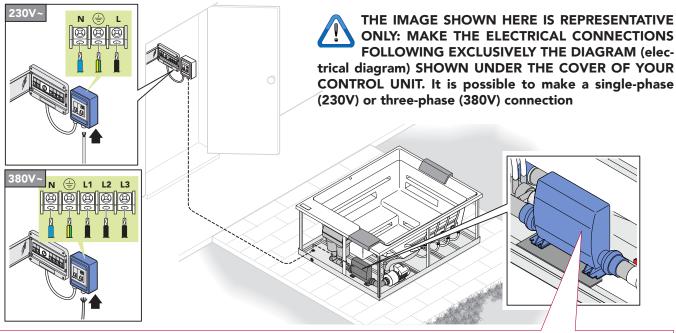

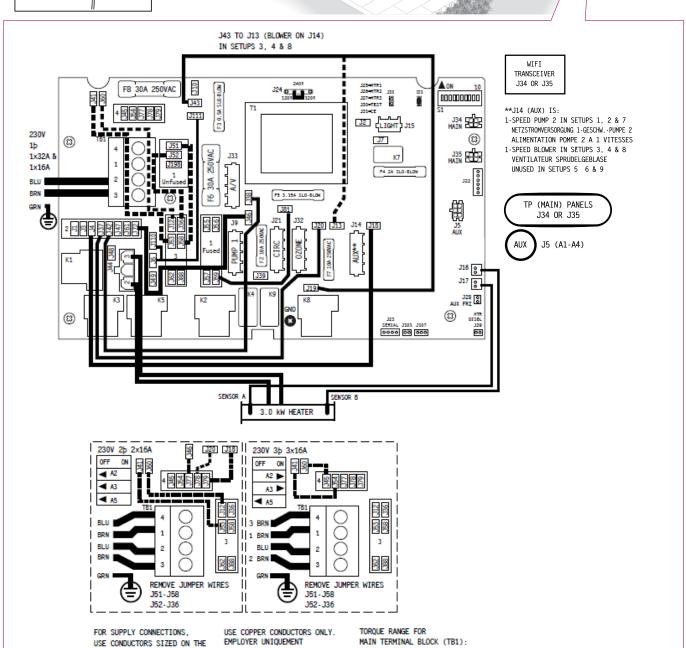

27-30 IN. LBS.

(31.1-34.5 kg cm)

DES CONDUCTEURS DE CUIVRE.

BASIS OF 60°C AMPACITY BUT

RATED MINIMUM OF 90°C.



CHARACTERISTICS OF THE WATER SUPPLY



More information

TAP WATER AND WELL WATER

To ensure maximum hygiene and durability of the minipool it is essential to pay close attention to the quality of the water that will be used to fill it. It is important that the water used be drinkable. It is always advisable not to use well water because it may be very hard, rich in metals like iron and manganese, and have bacterial loads. Tap water is recommended.

In the case of very hard or ferrous water it is always recommended to install softening and iron removal systems upstream.

The company cannot be held responsible for issues related to the use of non-drinkable water or lack of installation of such systems.

The plumber is responsible for choosing the type of components to be used and the verification of compliance with the purity and potability parameters of the water supply.

WATER HARDNESS

Water hardness (TH) is determined by the total content of calcium and magnesium present in the water, coming from their soluble salts.

Water classification:

......up to $7^{\circ}f$ = Very soft water From $7^{\circ}f$ to $14^{\circ}f$ = Soft water

From 14°f to 22°f = Slightly hard water From 22°f to 32°f = Fairly hard water From 32°f to 54°f = Hard watermore than 54°f = Very hard water

 $(1^{\circ}f = 10 \text{ mg calcium carbonate per litre of water})$


WATER ALKALINITY

Alkalinity (CAT) represents the concentration of bicarbonate ions present in the water. It is expressed as mg/L of calcium carbonate or in French degrees (°F). Ideal values of alkalinity range between 80 mg/L and 125 mg/L (8°F-12.5°F). Values outside of this range can more easily cause variations of the pH. Instead, alkalinity within the range noted makes it possible to "buffer" the pH value, resulting in fewer abrupt variations.

WATER PH

What is pH?

The pH is a chemical parameter that gives an idea of the acidity or basicity of the water. It can assume values between 0 and 14. By definition water is considered neutral if its pH is equal to 7. It is acidic if the pH is lower than 7 and basic if the pH is greater than 7. Disinfectants have an ideal pH at which they are most effective. In the case of heated water treated with bromine products it is recommended to keep the pH value in the range from 7.4 to 7.8 using chemical correctors as needed if the pH is higher or lower to bring the pH value back to the recommended interval.

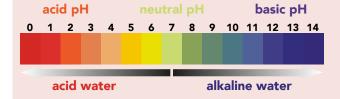

CHARACTERISTICS OF THE WATER SUPPLY

PARAMETER	OPTIMAL VALUES between	VALUES ABOVE OR BELOW CAN	
POTABILITY	Refer to the specific regulations of the country of use	cause problems related to the safety and well-being of users	
SUPPLY PRESSURE	maximum: 300,000 PA (3 bar) minimum: 150,000 PA (1.5 bar)		
HARDNESS (TH)	between 10°F and 25°F (100 mg/l-250 mg/l)	cause build-up that over time can cause damage to the walls of the minipool, the pipes, the filter system, as well as the heating unit and pumps. The limescale deposits can also hide bacterial loads that are not easily reached by disinfectant products. Installation mandatory. It is mandatory to install a <u>cation exchange resin water softener</u> , choosing the model according to the hardness of the water.	
рН	for bromine treatments it is recommended to keep the pH in the range 7.4 to 7.8	irritation of the eyes and skin of people in the water, water with little sanitising power, excessive consumption of chemicals, decrease in the duration of the minipool components.	
ALKALINITY (CAT)	80 and 125 mg/l (8-12.5°F)	more likely uncontrollable changes in pH	

Notes	EN	Shadow minipool
		lo .
		O°C

Maximum care has been paid to guarantee the accuracy of this manual.

The Manufacturer reserves the right to modify the equipment or the documentation at any time, without notice.

Therefore there might be small differences between this manual and the product you have received: we apologise in advance for any inconvenience. The total or partial reproduction of this manual without the Manufacturer's consent is prohibited. Measurements are purely indicative and not binding. The original language of this manual is Italian: the Manufacturer is not responsible for any mistakes in translation/interpretation.



treesse

www.gruppotreesse.it

GRUPPO TRE S s.p.a. 01036 Nepi (VT) - Italy S.S. Cassia km. 36.400 Settevene industrial area tel. (+39) 0761 527242 fax (+39) 0761 527223 info@gruppotres.it